


EAGLE PERIMETER EDGE SYSTEMS

2 piece TALON-LOK® INSTALLATION PROCEDURES

- Inspect and determine substrate to be in Satisfactory condition, with pressure treated Blocking fully anchored and properly Aligned. All surfaces should be smooth, Clean, dry, free of splinters and other Irregularities.
- Butt spring clip (allow 1/4" gap) sections and secure using corrosion resistant Fasteners (min 1 1/4" Galvanized Ring Shank Nail) located 3/4" below the roof edge, or approximately center of the blocking at 12" on center or as otherwise specified.
- Do not distort the face of the spring clip, Use shims to keep the surface flat if Necessary.
- Lay roofing membrane** over the spring clip allowing membrane to extend down the face to the drip edge.
- Install splice plates between each fascia section. Hook the splice plate from the top of the spring clip and allow splice plate to hang down the face of the spring clip. Install fascia section by hooking the back flange over the top of the spring clip. Snap the fascia section on by pushing down firmly on the outside edge until bottom snaps over the spring clip drip edge. Leave 1/8" gap (1/4" in cold weather) for thermal movement.
- Remove protective film from covers immediately after installation.

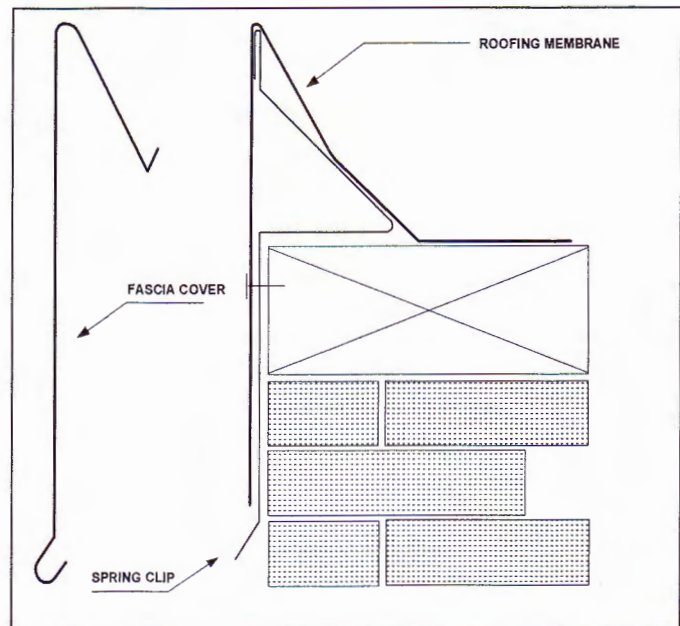

Continuous Spring clip / Blocking

** Consult membrane manufacturer prior to installation.