


EAGLE PERIMETER EDGE SYSTEMS EAZY GRIP® INSTALLATION PROCEDURES

- Inspect and determine substrate to be in satisfactory condition, with pressure treated blocking fully anchored and properly aligned. All surfaces should be smooth, clean, dry, free of splinters and other irregularities.
- Install the roofing membrane according to the roofing membrane manufacturer's instructions, extending the membrane approximately 3" beyond the roof edge.**
- Apply a continuous bead of sealant (by roofing manufacturer) to the bottom side of the spring clip.**
- Butt spring clip (allow 1/4" gap) sections and secure using corrosion resistant fasteners 1 1/4" Galv. Ring Shank Nails located 3/4" below the roof edge, or approximately center of the blocking at 6" on center or as otherwise specified.

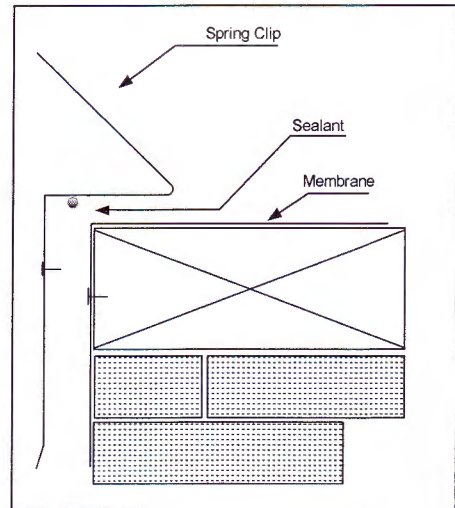

Continuous Spring clip / Blocking

- Install splice plates between each fascia section. Hook the splice plate from the top of the spring clip and allow splice plate to hang down the face of the spring clip. Install fascia section by hooking the back flange over the top of the spring clip. Snap the fascia section on by pushing down firmly on the outside edge until bottom snaps over the spring clip drip edge. Leave 1/8" gap (1/4" in cold weather) for thermal movement.
- Remove protective film from covers immediately after installation.

** Consult membrane manufacturer prior to installation.